

Wonderful Communication, Mobile Life

Welcome to use Wireless Terminal

Wireless Terminal

User Manual

Copyright © 2008 Huawei Technologies Co., Ltd.

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks



and HUAWEI are trademarks of Huawei Technologies Co., Ltd. All other trademarks mentioned in this manual are the property of their respective holders.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, expressed or implied.

Contents

1 Descriptions of the Terminal Management GUI.....	1
Launch the Terminal Management	1
Interface Overview	1
2 Internet Services.....	4
Accessing the Internet	4
Statistics Information.....	4
3 Voice Services	6
Requirements on the System Configuration	6
Icons on the Call Interface.....	7
Making a Call	7
Answering a Call	8
Call Settings.....	9
4 Text Services	10
Creating and Sending a Message	10
Inbox	10
Outbox	12
Important, Draft, Deleted and Reports	12
Viewing a Message in the UIM Card(Optional)	12
Text Message Settings	13
5 Phonebook.....	15
Phonebook Management in Local.....	15
Phonebook Management in the UIM Card(Optional)	17
Import/Export	18
6 Call Log.....	20
7 Settings and Information Query.....	21
Switching a Language	21
PIN Operations(Optional)	21
Choosing a Device.....	22
Viewing Diagnostics Information	22

Startup Settings.....	23
Connection Profile Settings.....	23
8 FAQs.....	25
9 Acronyms and Abbreviations.....	27

1

Descriptions of the Terminal Management GUI

Launch the Terminal Management

To launch the Terminal Management, double-click the shortcut icon of the Terminal Management on the desktop.




Note:




- There are two product models, One has a removable user identity module(R-UIM) and the other does not.
- The manual describes the product with the R-UIM, If a function is marked with “Optional”, it indicates that this function is only available in the product with the R-UIM.
- Contact your service provider for whether a User Identity Module (UIM) card is needed.
- If you are required to enter the Personal Identification Number (PIN) code, enter the correct one and click **OK**. If you fail to enter the correct PIN or PIN Unblocking Key (PUK) code, the network-related functions are unavailable.

Interface Overview

Shortcut Icons




The following table lists the shortcut icons provided by the Terminal Management.





Click...	To...
	Display the Connection interface.
	Query the statistics of the transferred data.
	Display the Call interface.

Click...	To...
	Display the Text interface.
	Display the Phonebook interface.
	Display the Call Log interface.

Status Information

The following table lists all the possible status information.

Status Information	Description
Network signal	Indicate the signal strength of the network
Network information	Display the profile of the current network.
New incoming call	<p>If the call alert is enabled, when there is an incoming call:</p> <ul style="list-style-type: none"> • In the system tray, the icon of the Terminal Management flashes. • On the lower right corner of the PC screen, the Prompt dialog box is displayed.
New message	<p>If the Text message prompt is enabled, when there is a new message:</p> <ul style="list-style-type: none"> • In the status bar, the icon  flashes. • On the lower right corner of the PC screen, the Prompt dialog box is displayed.
Missed call	<p>When there is a missed call:</p> <p>In the status bar, the icon  flashes.</p>
Unread message	<p>When there is an unread message:</p> <ul style="list-style-type: none"> • In the status bar, the icon  flashes. • When you move the cursor to the icon, the number of the unread message(s) is displayed.


Status Information	Description
Network connection	<p>The information of the network connection:</p> <ul style="list-style-type: none"> •  : The network is connected. •  : The network is disconnected.
Transferred data	<ul style="list-style-type: none"> •  : Data download is in progress. •  : Data upload is in progress.

2 Internet Services

Accessing the Internet

After setting the network and connection profiles, you can access the network through the Terminal Management.

You can connect the network by one of the following options:

1. Click .
2. Select the correct profile in the drop-down arrow.
3. Click **Connect** to set up the connection.
4. Launch the browser on the PC to access the internet.

Note:


- When the connection is established, the main interface displays the details of the current network, including connected duration, data statistics, transferred rate and so on.
- When the connection is established, choose **Disconnect** to disconnect from the network.

Statistics Information

You can use the **Statistics** function to check the traffic of the network.

Viewing the Statistics Information

You can do as follows to view the statistics information:

1. Click  to display the statistics interface.
2. In the navigation tree, click the following tabs to display the corresponding diagram.
 - **Transfer**: View the uploaded/downloaded speed and data of the current connection.
 - **Statistics**: View the current connected duration, last reset time, and daily/monthly/yearly uploaded and downloaded data.

Note:

The statistical data of the traffic is only for your reference. The actual traffic information is accounted on the basis of the traffic data collected by the operator.

Resetting the Statistics Information

You can operate as follows to reset the statistics information:

1. In the navigation tree, right-click a tab.
2. Choose **Reset Statistics**.
3. In the **Confirm** dialog box, click **Yes**.

3

Voice Services

If your terminal supports voice services, you can make and answer calls by the Terminal Management. Before using the voice services, insert the earphone to the earphone jack on the terminal.

Note:

Launch the Terminal Management before using the voice services. You cannot call and answer the telephone when the Terminal Management is not launched.

For good voice quality, you can do as follows:

- Because the devices of both calling parties can affect the voice quality, it is recommended both parties use the headset with a built-in microphone or move into a more silent environment.
- If a headset without properly shielded cable is being used, the cable should be kept separate from the USB modem and the PC in order to avoid disturbing electrical humming noise from the call.
- Adjust the speaker's and microphone's volume settings from your audio device's control panel.
- Use an earphone with built-in microphone and adjust the location of the microphone, use a separate external microphone or update the audio adapter driver to improve the voice quality.
- When there is no built-in microphone in your PC, connect the earphone connector to the microphone jack of the audio adapter, and then speak into the earphone.











Requirements on the System Configuration

To achieve the optimal voice quality, the system configuration of your PC should meet the following requirements:

- Operating system: Windows 2000, Windows XP or Windows Vista
- Memory: 256 M or above
- Harddisk space: 30 M or above
- Full-duplex audio adapter (usually produced after 1998) and headset


Icons on the Call Interface

The following table lists the icons and their functions on the **Call** interface.


Click...	To...
	Mute/Unmute the microphone.
	Decrease/Increase the volume during a call.
	Display the dialed calls in the standby mode. Make a call after you enter the phone number.
	Select a phone number from the phonebook.
	Delete the entered numbers one by one. Clear all the characters (by clicking the icon and hold over two seconds).
	Enter the phone number.
	Enter +.
	Enter *.
	Enter #.
	End a call.

Making a Call


Dialing Through the Call Interface


Click  to display the **Call** interface.

Entering a Phone Number Directly



1. Click the number keys on the **Call** interface or press the number keys on the keyboard.
2. Click  or press **Enter** on the keyboard to dial.

Choosing a Phone Number



1. Click  to display the **Select Number** interface.
2. Select a phone number in the list and click **OK**.

3. Click  or press **Enter** to dial.


Dialing Through Dialed Call Records

1. Click .
Then the dialed calls are displayed on the lower screen, and the last dialed number is displayed on the upper screen.
2. Select a phone number.
3. Click  or press **Enter** on the keyboard to dial.



Dialing Through the Phonebook

1. Click  to display the **Phonebook** interface.
2. Select a contact from the phonebook.
3. Click  to display the **Select Number** interface.
4. Select a phone number and click **OK**.

Dialing Through the Text Message

1. Click  to display the **Text** interface.
2. In the navigation tree, click **Inbox**, **Outbox** or **Important**.
3. In the message list, select a message.
4. Right-click the selected message and choose **Call**.

Dialing Through the Call Log

1. Click  to display the **Call Log** interface.
2. Select a call record as follows:
 - Select a number in the right list directly.
 - Click **Answered Calls**, **Missed Calls** or **Dialed Calls** in the navigation tree. Then select a record in the list.
3. Click  to dial the number.


Answering a Call

When there is an incoming call, you can answer the call as follows. If you enable the call alert, the ringtone or visual prompt can be displayed.



1. Click to display the **Call** interface.



2. Click to answer the call., and click  to end the call.

Note:

- When there is an incoming call, the icon of the Terminal Management flashes in the system tray.
- If the visual prompt is enabled, when there is an incoming call, the Prompt dialog box is displayed on the lower right corner of the screen. Then you can click Answer to answer the call.

Call Settings

You can set the call alerts and call forwarding.

Call Alert Settings

Choose **Tools > Option > Call**. Then click the **General** tab.

Setting the Visual Prompt

Select **Visual prompt on incoming calls** to enable the visual prompt.

Deselect **Visual prompt on incoming calls** to disable the visual prompt.



Setting the Call Alert

1. Click **Browse** and select a ***.wav** or ***.mid** file.
2. Click **Test** to play the ring tone, and click **Stop** to stop playing the ring tone.
3. Click **OK** to set the selected ring tone as the call alert.

4 Text Services

The Terminal Management provides Text services. The local mailbox can store the messages without capacity limitation and can be easily managed.

Creating and Sending a Message

1. Click  to display the **Text** interface.
2. Click  to display the **New** interface.
3. Enter the recipient number by one of the following options:
 - Click **Send To...**. Then select a phone number in the **Select Number** interface.
 - Enter the recipient number directly.
4. Enter the message content.
5. After the edit, you can choose the following options:
 - Click **Send**: To send the message.
 - Click **Save**: To save the message in the draft.
 - Click **Close**: To exit from editing the current message. If you click **Yes** in the **Confirm** dialog box, the message can be saved in the **Draft**.


Note:

- You can group send a message to up to 20 phone numbers. Each number should be separated by ";".
- You can enter up to 2,048 characters each time.


Inbox

Inbox stores the received messages.

To display the **Inbox** interface, do as follows:

1. Click  to display the **Text** interface.
2. Choose **Local > Inbox** to display the **Inbox** interface.

Searching a Message

Click . Then enter the name/phone number of the message sender, part of the message content or received time.

Note:

- You can enter part of the message content to search.
- When you search the message, a list of the matched messages is updated automatically according to your entered information. The matched contacts in the searched group are displayed. None is displayed when no matched message can be searched.

Viewing a Message




You can view a message in the inbox as follows:


1. Display the **Text** interface and select a message to read.
2. Click the selected message.
The name and phone number of the message sender, message content and receiving time are displayed below the message list.
3. Right-click the selected message for the following options:
 - **Edit**: Re-edit the message.
 - **Reply**: In the **Edit** interface, re-edit the message and send it to the message sender.
 - **Forward**: Forward the message to another person
 - **Call**: Make a call to the message sender
 - **Save Number**: In the **New Contact** interface, enter other information and save the contact.
 - **Delete**: Delete the message.
 - **Delete All**: Delete all the messages in the inbox.

Note:

- You can press and hold **Shift** or **Ctrl**, and click the selected messages; or you can press **Ctrl + A** to select all the messages in the list.
- The messages deleted from the inbox are stored in the Deleted box.
- You can forward only one message a time.

You can also click the shortcut icons above the message list to perform the following operations:


- : Send a message.
- : Reply the selected message.
- : Forward the selected message.

- : Delete the selected message.

Outbox

Outbox stores the sent messages, including the messages sent both successfully and unsuccessfully.

To display the **Outbox** interface, do as follows:

1. Click  to display the **Text** interface.
2. Choose **Local > Outbox** to display the **Outbox** interface.

Note:

- For details, refer to **Inbox**.
- To the group sending messages, you cannot call the message recipients.

Important, Draft, Deleted and Reports

Important stores your important messages.

Draft stores the drafts of messages.

Deleted stores the messages deleted from the local mailbox.

Reports stores the delivery notifications after sending messages.

Note:

- For details, refer to **Inbox**.
- If you delete the messages in the Deleted box, the messages will be deleted permanently. Be cautious with your operation.

Viewing a Message in the UIM Card(Optional)

The operations to the messages in the UIM card are as same as those to the messages in the local message box. For details, refer to **Inbox**.


Note

- Contact your service provider for whether a UIM card is needed.
- The UIM card is supplied by the service provider. For details, contact your service provider.

- If your terminal does not need a UIM card, you can save the sent and received messages in the terminal. The operations to the messages in the terminal are as same as those to the messages in the UIM card.

You can move a message from the UIM card to the local inbox or local outbox.



1. Click  to display the **Text** interface.
2. Click the **UIM** tab.
3. Select one or more contacts in the contact list and right-click.
4. Right-click the selected message(s) for the following options:
 - **Move to Local:** Move the selected messages from the UIM card to **Local**.
 - **Move All to Local:** Move all the messages from the UIM card to **Local**.
5. In the **Confirm** dialog box, click **OK**.

Note:

- When the messages in the UIM card are moved to **Local**, the messages are deleted from the UIM card.
- The received messages in the UIM card are moved to the local inbox, and the sent messages in the UIM card are moved to the local outbox.

Text Message Settings

Choose **Tools > Option**, and click the **Text Message** folder.

Text Alerts Settings

You can select the visual prompt and audio prompt.

Option	Description
Show a notification when a new text message arrives	<p>When there is a new text message, a dialog box is displayed. Then you can:</p> <ul style="list-style-type: none"> • Click View to view the new message. • Click Close to view the message later.
Play a sound when a new text message arrives	<p>You can perform the following operations:</p> <ul style="list-style-type: none"> • Click Browse to select a text message tone file. • Click Test to play the text message tone; click Stop to stop playing the text message tone. <p>Then, when there is a new message, the selected text message tone is played.</p>

Note:

The Text message tone can be a *.wav or *.mid file.

Setting the Text Message Priority

You can set the text message priority, to label the message with their preferences.

The text message priority includes such options as **Normal**, **Urgent** and **Emergency**.

Requesting a Delivery Report

You can select **Request delivery report** to enable the delivery report function.


When the function is enabled, the network can deliver a status report of the sent message.

5 Phonebook


You can manage contacts in the phonebook conveniently by the Terminal Management.

Phonebook Management in Local

You can do as follows to enter the local phonebook:

1. Click  to display the **Phonebook** interface.
2. Click **Local** in the navigation tree.


Creating a Contact

1. Click  to display the **New Contact** interface.
2. Enter the information.
3. Click **OK** to save the contact.

Note:

The contact information cannot be null or contain spaces or new-line characters only.

Searching a Contact

Click . Then enter the contact information.

Note:




- You can enter part of the contact information to search. Each field of the contact can be supported.
- When you search the contact, the contact list is updated automatically according to your entered information. The matched contacts in the searched group are displayed. None is displayed when no matched contact can be searched in the group.

Viewing a Contact

You can view a contact as follows:

1. Enter the local phonebook, select a contact to view.
2. Click the selected message.
The contact name, mobile number, office number, home number, E-mail address and remarks are displayed below the contact list.
3. Right-click the selected message, and you can do as follows:
 - **Edit Contact:** Change the information of the contact.
 - **Delete Contact:** Delete the contact.
 - **Send:** Send a message or business card to the mobile number of the contact.

You can also click the shortcut icons above the contact list to perform the following operations:

-  : Edit the selected contact.
-  : Delete the selected contact.
-  : Send a message or name card to the mobile number of the contact.

Group Management

You can create a group to manage the local contacts by category.

Creating a Group

You can create a group to manage local contacts by category.

1. Right-click **Local** in the navigation tree, and choose **New Group**.
2. Enter the group name.

Note:

- The group name cannot be null or identical to any existing one.
- You can manage only local contacts by group.

Modifying a Group Name

1. Select a group to modify.
2. Right-click the selected group in the navigation tree, and choose **Rename Group**.
3. Enter the new group name.

Note:

You cannot rename the default **Local** groups.

Adding a Contact


You can add a contact from **Local** to another group as follows:

1. Select one or more contacts in **Local**.
2. Drag the selected contacts to another group.

Note:

When you drag the selected contact(s), if you press and hold **Ctrl**, the contact(s) can be copied to another group; otherwise, the contact(s) are moved to another group.

You can add a contact to a group as follows:

1. Select a group in the navigation tree.
2. Click ; or right-click in the contact list and choose **New Contact**.
3. Enter the information.

Removing a Contact

1. Display the contact list of a group.
2. Select a contact to remove.
3. Right-click the selected contact and choose **Remove from Group**.

Note:

The contact is removed from the group but not deleted.

Deleting a Group

1. Right-click a group in the navigation tree and choose **Delete Group**.
2. Click **OK**.

Note:

When you delete a group, contacts in the group cannot be deleted. They are still in the phonebook of **Local** or in other groups.

Phonebook Management in the UIM Card(Optional)

If a UIM card is used in your terminal, you can save the contacts in the UIM card.

The operations on the contacts in the UIM card are similar to those on the contacts in **Local**. For details, refer to **Phonebook Management in Local**.

Note:

- Contact your service provider for whether a UIM card is needed.
- The UIM card is supplied by the service provider. For details, contact your service provider.

Import/Export


Import/Export the Contacts from Local Phonebook

You can export the contacts from **Local** to a *.csv file, and import the contacts from a *.csv file to phonebook in **Local**.

Importing Contacts

You can import the contacts from a *.csv file to the local phonebook.




1. Click  to display the **Phonebook** interface.
2. Click **Local** in the navigation tree.
3. Right-click the contact list and choose **Import...**
4. Choose a file to import. Click **Open** to display the **Map** interface.
5. Drag the value in the file to the corresponding field on the right respectively.
6. Click **OK**.

Exporting Contacts

You can export contacts from the local phonebook. The exported contacts can only be saved in a *.csv file.



1. Click  to display the **Phonebook** interface.
2. Click **Local** in the navigation tree.
3. Choose one of the following operations:
 - Right-click the contact list and choose **Export All Contacts**.
 - Choose one or more contacts and right-click to choose **Export Selected Contacts**.
4. Choose the path to save the contact(s).
5. Enter the file name and click **Save**.

Note:

You can press and hold **Shift** or **Ctrl**, and click the selected contacts; or you can press **Ctrl + A** to select all the contacts in the list.

Import/Export the Contacts from the UIM Card(Optional)

If a UIM card is used in your terminal, you can export the contacts from the UIM card to a *.csv file, and import the contacts from a *.csv file to phonebook in the UIM card.

The operations on the contacts in the UIM card are similar to those on the contacts in **Local**. For details, refer to "Import/Export the Contacts from Local Phonebook" on page 18.


Note:

- The maximum number of contacts that can be saved in the UIM card is subject to the capacity of the UIM card.
- When you import contacts to the UIM card, if its capacity is full, the import stops automatically. The content of the imported contacts is not affected.
- In the local phonebook, select one or more contacts. Drag the contact(s) to the UIM card in the navigation tree. Then the contact(s) are exported to the phonebook of the UIM card.






6

Call Log

To view a call log, you can do as follows:



1. Click  to display the **Call Log** interface.
2. Click the following tabs in the navigation tree to display the corresponding list:
 - **Answered Calls:** Store records of answered calls, including names/phone numbers of the callers, the start time and duration of the calls.
 - **Missed Calls:** Store the records of missed calls, including names/phone numbers of the callers, the start time the calls.
 - **Dialed Calls:** Store the records of dialed calls, including names/phone numbers of the callers, the start time and duration the calls.

You can select a call record for the following options:

- Click  : Make a call.
- Click  : Send a message.
- Click  : Save the phone number.
- Click  : Delete the selected record.
- Click  : Clear all the records in current list.

Note:

You can select one or more records for the following options:

- Click  : Send a message to the number(s) of the selected record(s)
- Click  : Delete the selected record(s).

7

Settings and Information Query

Switching a Language

The Terminal Management provides several interface languages.

During the running of the software, you can choose **Tools > Language** to switch the languages.

PIN Operations(Optional)

If a UIM card is used in your terminal, the Personal Identity Number (PIN) code protects your card from unauthorized use. You can modify the PIN code and enable/disable the PIN verification.

Note:

The PIN code and PIN Unblocking Key (PUK) code are provided along with your UIM card. For details, contact your service provider.

Enabling/Disabling the PIN Verification

You can enable the PIN verification. If it is enabled, you need to verify the PIN code when launching the Terminal Management again.

- To enable: Choose **Tools > PIN Operations > Enable PIN Verification**.
- To disable: Choose **Tools > PIN Operations > Disable PIN Verification**.

Modifying the PIN Code

1. Choose **Tools > PIN Operations > Modify PIN**.
2. In the **Modify PIN** dialog box, enter the current PIN code and the new PIN code.
3. Enter the new PIN code again.
4. Click **OK** to complete the modification.

Note:

The PIN code should be a numeric string of 4 – 8 digits.

Entering the PIN Code

When the PIN verification is enabled, you need to enter the correct PIN code to use the network-related functions.

1. After the Terminal Management is launched, the **Enter PIN** dialog box is prompted.
2. Enter the correct PIN code.
3. Click **OK** to complete the verification.

Note:

- If you enter wrong PIN codes for a preset number of times, the UIM card is locked and you cannot use it until you enter the PUK code. The Terminal Management prompts you the remaining number of attempts for entering the PIN code or the PUK code.
- When the UIM card is locked, you can still dial emergency numbers.

Unlocking the PIN

1. When the UIM card is locked, the **Unlock PIN** dialog box is displayed after you start the Terminal Management.
2. Enter the correct PUK code.
3. Enter the new PIN code.
4. Click **OK** to complete the modification.

Choosing a Device

The Terminal Management can support different terminal products.

When the Terminal Management is launched, it searches the matched terminal automatically. If two or more terminals are found, the connected terminals are displayed on the **Choose Device** interface. You can choose a terminal to run and click **OK**.

If two or more supported terminals are connected with the PC, you can change or choose a device during the running of the Terminal Management.

1. Choose **Tools > Choose Device**.
2. Select a device in the device list.
3. Click **OK** to terminate the current terminal and switch to the selected one.

Viewing Diagnostics Information

Choose **Tools > Diagnostics** to view the information of the Terminal Management, such as the number of messages and contacts, firmware version, hardware version, and IMSI number.

Startup Settings

You can set the Terminal Management to launch automatically along with Windows and minimize the interface after the startup.

1. Choose **Tools > Options**.
2. Click **General** in the navigation tree.
3. You can choose the following options:
 - Select **Launch on Windows startup**: The Terminal Management launches automatically along with Windows.
 - Select **Minimize window on startup**: The interface of the Terminal Management is automatically minimized after the Terminal Management is launched.
4. Click **OK** to complete the settings.

Connection Profile Settings

To display the **Dial-Up** interface, you can do as follows:

1. Choose **Tools > Options**.
2. In the navigation tree, click **Profile Management**.
3. Click the **Dial-Up** tab.

Note:

For details about setting the profile, contact your service provider.

Creating a Dial-up Profile

1. Click **New** to set the profile name, access number, user name, password, and select a default device.
2. Click **Advanced** to set the IP information, authentication protocol, Domain Name Server (DNS) and Windows Internet Name Service (WINS).
3. Click **OK** to save the advanced settings and return to the **Dial-Up** interface.
4. Click **OK** and the **Prompt** dialog box is displayed.
5. Click **Yes** to save the settings; or click **No** to cancel the settings.

Editing a Dial-up Profile

1. In the **Profile Name** drop-down combo box, select a setting.
2. Click **Edit** to modify the profile name, access number, user name, password, and select a default device.
3. Click **Advanced** to set the IP information, authentication protocol, DNS and WINS.
4. Click **OK** to save the advanced settings and return to the **Dial-Up** interface.
5. Click **OK** and the **Prompt** dialog box is displayed.
6. Click **Yes** to save the settings; or click **No** to cancel the edits.

Deleting a Dial-up Profile

1. In the **Profile Name** drop-down combo box, select a setting.
2. Click **Delete** and the **Prompt** dialog box is displayed.
3. Click **Yes** to delete the setting; or click **No** to cancel the deletion.

8

FAQs

What shall I do if I cannot access the Internet?

1. Check the network signal strength.
2. Check whether you have activated the wireless online service. You can ask the local network operator on how to activate it.
3. If the wireless online service is activated, check network settings according to the instructions in **Internet Services**.

Why only part of the pasted content can be displayed during the edit?

When editing a message, at most 2048 characters can be entered. If the quantity of the pasted information exceeds the limit, the exceeding part will be deleted automatically.

When a message is received, no prompt is displayed. Why?

You have not set the vision alert of messages.

Choose **Tools > Options > Text**. In the **Text handing** area, select **Show a notification when a new text arrives**.

Why the phone number cannot be pasted?

A valid phone number can only contain "0123456789#*+". Confirm that no other character is in the cut or copied text.

Why cannot sounds be heard when I answer a call?

1. Check whether the audio adapter and audio adapter driver are installed on your PC.
2. If the audio adapter and audio adapter driver are installed, check whether the PC speaker is disenabled.
3. Make sure that a microphone is used during a call. Otherwise, you cannot have a call with using the sound box.

How to avoid echoes during a call?

The echoes are caused by the sound effect device of the other party. Do as follows to avoid the echo and improve the voice quality during a call:

- Request the other party to use an earphone that can lessen the echo instead of using the loudspeaker.
- If the other party uses the loudspeaker, you can turn down the volume to lessen the echo by the reducing the noise that the microphone receives from the loudspeaker.

How to avoid the noise during a call?

1. Choose a quiet place to have a call.
2. Use the external earphone and microphone with high-performance because the built-in microphone of the PC receives more background noise.
3. Deselect **Mic Boost**. This option can enlarge the audio collection range in the same environment and too much noise can be collected.
4. Adjust the location of the microphone to keep it far away from the noise source, such as the heat dissipation fan of the PC.

Why cannot the sound of the other party be heard during a call (which is always called a unidirectional call)?

A unidirectional call indicates that one party cannot hear the sound of the other party. The problem may be caused by the following reasons:

1. The sound effect is not set properly.
 - Check whether your microphone is muted. There may be a mute/unmute button on the microphone.
 - The loudspeaker volume of the other party may be off or too low. The both parties should check the settings of their own devices, and ensure they can hear the other sounds on the computer.
 - Your mixer may be set improperly. For details, refer to the audio adapter manual.
2. The network signal strength is too weak.

A unidirectional call can be caused by weak signal strength or network failures. Dial the number again in the place with strong signals.

Why do audio discontinuity and delay occur during a call?

The audio discontinuity and delay can be caused by the low network performance and weak network signals. Call in a place with strong signal.

9

Acronyms and Abbreviations

Numerics

3G The Third Generation

C

CDMA Code Division Multiple Access

D

DNS Domain Name Server

E

EVDO Evolution Data Optimization

P

PIN Personal Identification Number

PUK PIN Unblocking Key

U

UIM User Identity Module

W

WINS Windows Internet Name Service